



Sony FX30 Settings

These settings are for video recording in the S-Cinetone Picture Profile (PP11) on the Sony FX30. The resulting footage has a cinematic look that optimizes skin tones and provides a film-like color palette to your videos. There are other menus and settings available on this camera, but these are the important ones for setting it up for shooting cinema-style video. We recommend using the Sony XLR handle for best audio results.

Main Menu 1 Settings

Rec Frame Rate: 23.98
Shutter Speed: 1/48
ISO: 400 to 5000 (if possible, use native ISO 800 or 2500)
White Balance: Kelvin Color Temperature or Custom
Picture Profile: PP11 (S-Cinetone)
File Format: XAVC S-I HD
Record Setting: 89M 422 10bit
Gamma Display Assist: Off

Main Menu 2 Settings

Log Shooting Setting: Flexible ISO
File Name Format: Cam ID + Reel #
Focus Mode: Manual
SteadyShot: Set to "Off" when using a tripod but useful if shooting handheld.

Shooting Menu Settings:

S&Q Settings:
S&Q Rec Frame Rate: 23.98p
S&Q Frame Rate: 8-120 fps
S&Q Record Setting: 89M 4:2:2 10bit

Log Shooting Settings:
Log Shooting: Off

TC/UB

Time Code Preset: Set to current time of day
Time Coe Run: Free Run

Camera Audio Settings (when using Sony XLR Handle)

Sound Recording: Manual
Rec Level: Set to 50% mark
Attenuator: -10dB
Wind Noise Reduction: Off

Check that date and time are correct in System Menu. Please format cards before using